

HME RECOMMENDED SYSTEM CONFIGURATIONS

Below is a table of recommended system configurations for an HME system. While each coaching staff may have its own unique set of needs, these configurations are the most common setups and are the default configurations when a full system is shipped from our warehouse. It is ultimately your decision, based on the hardware you have, what the optimal configuration is for your staff.

NO. OF BELTPACS / ALL-IN-ONES	SINGLE BASE STATION	BASE STATION AND OPEN MIC EXPANDER (OR SECOND BASE STATION)		TWO BASE STATIONS AND OPEN MIC EXPANDER		
		REGISTER UNIT To	PRIMARY BASE (3 LINES)	OME / SEC. BASE (3 LINES)	PRIMARY BASE (3 LINES)	SEC. BASE (3 LINES)
3 or Less	All Open	N/A	N/A	N/A	N/A	N/A
4	2 Open & 2 PTT	3 All Open	1 Open	N/A	N/A	N/A
5	2 Open & 3 PTT	3 All Open	2 All Open	N/A	N/A	N/A
6	2 Open & 4 PTT	3 All Open	3 All Open	N/A	N/A	N/A
7	Recommend adding OME before getting additional Beltpac / All-in-One	3 All Open	2 Open & 2 PTT	3 All Open	3 All Open	1 All Open
8	N/A	3 All Open	2 Open & 3 PTT	3 All Open	3 All Open	2 All Open
9	N/A	3 All Open	2 Open & 4 PTT	3 All Open	3 All Open	3 All Open
10	N/A	Recommend adding OME before getting additional Beltpac / All-in-One		3 All Open	3 All Open	2 Open & 2 PTT
11	N/A	N/A	N/A	3 All Open	3 All Open	2 Open & 3 PTT

These configurations are merely recommendations and are the most common setups. Each staff may adjust these configurations to fit its needs.

It is important to note that these recommendations have the most Open-Mic units allowed by the hardware available. Each Base Station / OME has three lines available for use. If you have more Beltpacs / All-in-Ones than lines available, the lines must be shared and you must have some PTT units.

If you have any questions, please feel free to call us at **724-337-1400**.